

FIXXOO


Display Repair Set

für/for

14

Anleitung / Manual

FIXXOO

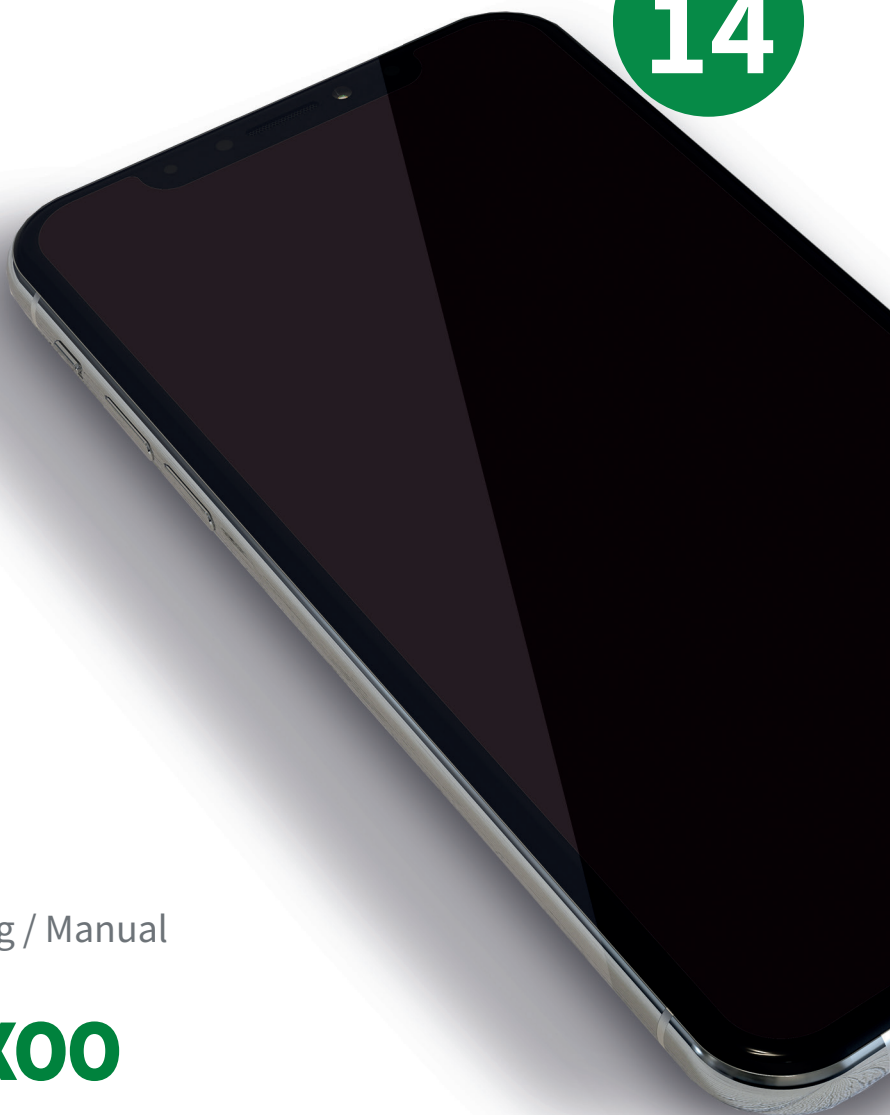

With the Fixxoo repair set, you can bring your iPhone back to life in no time! Everything you need is included in this package.

You can find complete video instructions, FAQ, and further help with repairing your iPhone 14 at

www.fixxoo.com

Safety information

1. Your smartphone must be turned off during assembly/disassembly. Also, the battery can be disconnected before changing the display for additional safety. The battery must not be bent, broken, pierced, or damaged in any way during assembly/disassembly. A damaged battery can cause injury.
2. **Handle the display with care. The LCD display of this device has a very thin protective glass layer which can be scratched, damaged, or imprinted if pressure is applied to it.**
3. **The display must not be bent, broken, pierced, or damaged in any way. A damaged display can cause injury.**
4. Do not expose the display or iPhone to open flames or liquids.
5. Protect the display and the iPhone from impacts.
6. Do not use the iPhone if it is damaged, as this can cause overheating and injury.
7. Read these instructions carefully and keep them for future reference.
8. Follow all warnings, instructions, and indications in the included documents.


Please note: After changing the display, the iPhone is no longer watertight, and all warranties provided by the manufacturer are voided!

Your tools



Spudger

With the spudger you can lift and separate plugs and other components.

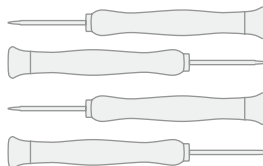


Screwdrivers

Three high-quality screwdrivers (Pentalobe, phillips, and tri-wing, stand-off) help you remove and insert the different types of screws.




Suction puller

You'll need the suction puller to lift the display.

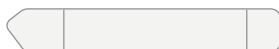

Lifting tool

With the lifting tool you can loosen glued areas and remove components from the case.

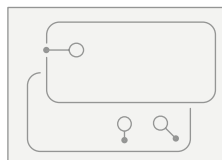

Screw map

The magnetic screw map lets you collect screws and other small metal parts until you need them for reassembly.

Successful DIY repair

You'll find all the information in this repair manual printed in three colors:

All the information directing you step-by-step through the DIY repair of your iPhone is in gray. Follow these steps to complete the repair successfully.

Optional information which makes the repair easier is in italics.

All warning indications which are critical to follow, even if they are not part of the step-by-step repair, are in red.

PART 1: REMOVING THE DISPLAY



Opening the case

⚠ Discharge the battery to 20% or less before beginning the DIY repair. Otherwise it could possibly catch fire or even explode in case of accidental damage.

- Turn off the iPhone before you begin.
- Remove both Pentalobe screws at the bottom edge of the phone.
- *Tip: After opening the iPhone, the seals will no longer be watertight, so it's best to install new seals. If you don't wish to do this, you should be careful with the iPhone in wet environments.*
- *Tip: You can continue to use the Pentalobe screws if the black rubber seal is undamaged. If it is not, it is better to replace the screws.*


Masking the display

- Is your display cracked? Then you should cover it with adhesive tape in order to avoid injury.
- Overlap the tape strips so that they completely cover the surface of the display.
- *This makes the display more stable and easier to remove.*

⚠ Eye protection (e.g. safety glasses) is recommended during repair, to protect against any possible glass shards.

- Gently heat the bottom edge of the iPhone (where the Lightning connector is located) with a hair dryer. This softens the adhesive, making the case easier to open.

Lifting out the display with the suction puller

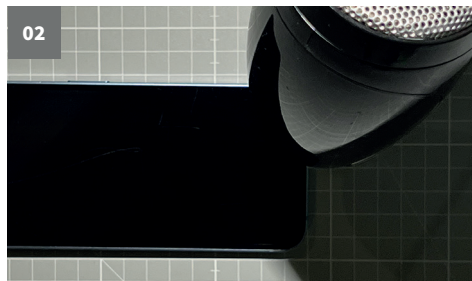

- Attach the suction puller (part of the Fixxoo tool kit) near the bottom edge of the phone.
- *Tip: if the display is heavily damaged, you can either attach the suction puller with adhesive tape or form a handle with tape (instead of the suction puller) and stick it on the display. As a last resort, you could attach the suction puller to the cracked display with strong glue.*
- Pull the display glass up with the suction cup to open a small gap between the display and the frame. Insert the pick there.
- Lift the display glass with the suction puller to open a small gap between the display and the frame.
- Insert the lifting tool into the gap.
- The adhesive is very strong, so you'll need to use some muscle to open a gap. Heat helps! Use a hair dryer to soften the glue on the bottom edge.
- Move the suction puller repeatedly upward and downward. If it is too difficult to open a gap, you'll need to apply more heat. Carefully move the display up and down, loosening the adhesive, until the gap is wide enough to insert the tool.




EN Separate the glue seal between the display and the frame.



- Starting from the lower-right corner, slide the lifting tool up the right side of the frame (to the position of the volume buttons), to separate the glue seal holding the display and frame together.
- Repeat this step starting from the bottom edge and going along the right side of the frame.

⚠ Do not insert the lifting tool too far into the iPhone, to avoid damaging inner components.

⚠ There are two sensitive areas on the left-hand side (see Fig. 6). There are ribbon cables running there that you must not damage.

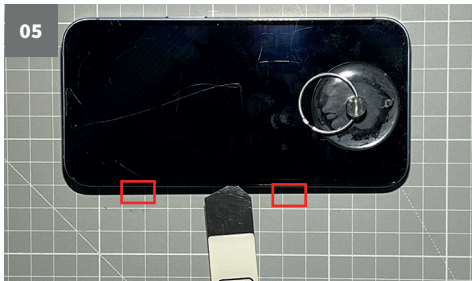


- Don't apply too much pressure - if in doubt, heat with a hairdryer is the best way to help.

Loosening the upper edge

- Now the display is still attached to the frame at the upper edge. It is attached here with both glue and clips.
- Slide the lifting tool around the upper right corner. Gently move the display toward the bottom edge, gently wiggling the display.

⚠ Be patient and gentle so as not to damage the clips. Also, be sure not to insert the lifting tool more than a few millimeters into the case, to avoid damaging the sensors at the upper end of the display.

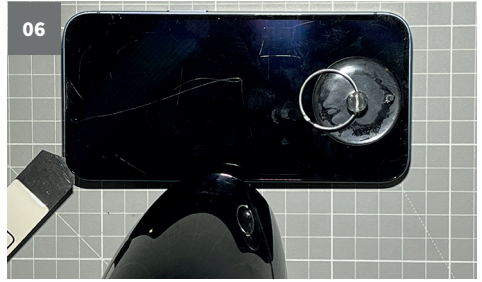

- Completely separate the rest of the glue at the upper end of the frame by sliding the lifting tool to the left.

Removing the suction puller


- Next, remove the suction puller by pulling on the small tab at the edge. Now you can remove it from the display.

Opening the iPhone

- The display is connected to the logic board on the left side of the iPhone with ribbon cables. You can open it from the right edge just like a book.

⚠ Open the iPhone carefully so as to avoid damaging the sensitive cables.

- *Tip: use an object to support the display from underneath.*

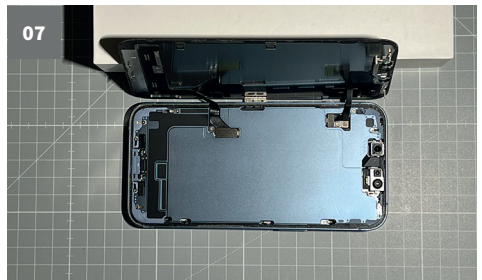


PART 2: WORKING ON THE IPHONE CASE

Removing the cover of the display connector



- You will find two ribbon cables in the housing on the left. The lower one belongs to the display connector, which is protected by a cover.
- Loosen the triwing screw of the cover with the blue screwdriver.

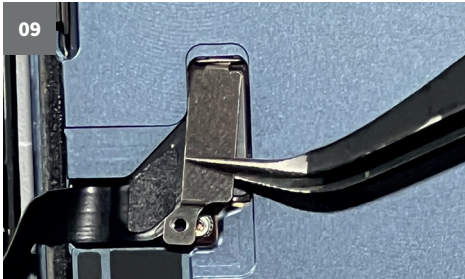

- Then you can remove the cover with the tweezers.


Remove connector



- Remove the display plug with the tip of the spudger.

⚠ Many plugs in the device have a black silicone seal that provides additional protection against water and dust. Take care not to damage this seal.

Loosen the cover of the front sensor cable

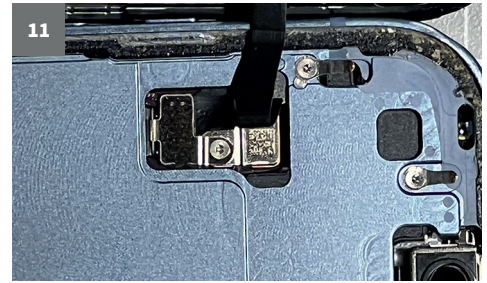


- There is also another cover above the front sensor cable on the left-hand side.
- Remove the triwing screw as well.




- Use the tweezers to remove the cover from the housing. Use the screw card to find the screw and cover again later.

Remove the front sensor cable plug

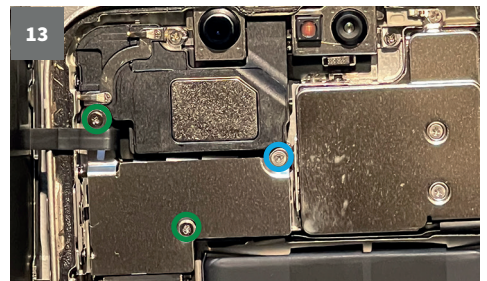

- You can now use the spudger to disconnect the plug of the front sensor cable.
- Be careful when working here. You must not damage the front sensor cable, e.g. by kinking it.


Lifting the display

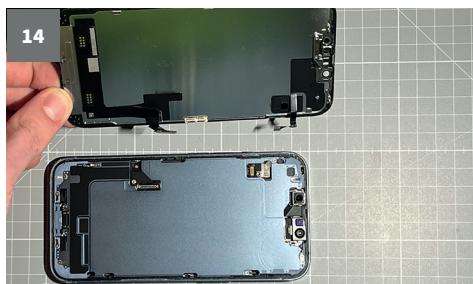


- A good part of the repair is done and the display is separated from the housing.
- Put the housing away. You no longer need it.

PART 3: WORKING ON THE DISPLAY

Removing the sensor unit

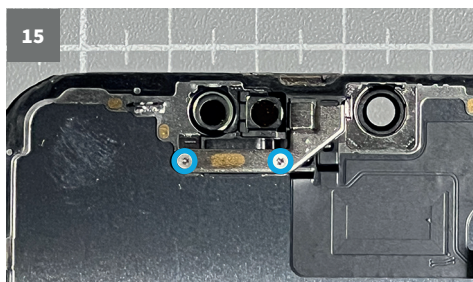


- Now let's take a look at the damaged display. Remove both triwing screws (blue) of the sensor unit bracket

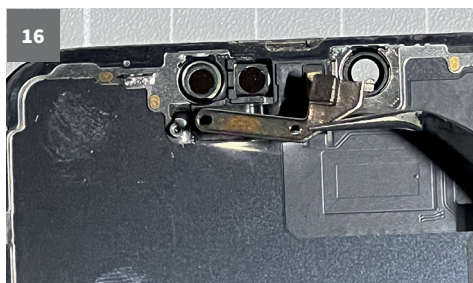


- Now you can put the bracket away.

Preparing to remove the sensors


- You will need some heat again for the next steps. However, the display is very sensitive to heat, so make sure that it does not get too hot.

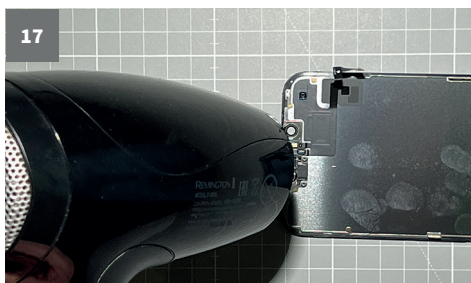

Releasing the proximity sensor

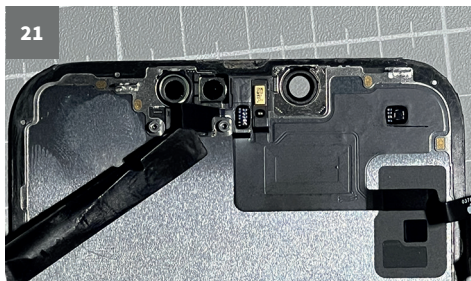

- Guide the tip of your spudger under the proximity sensor and release it from its recess.
- This is attached with a ribbon cable. Carefully bend the cable away with tweezers.

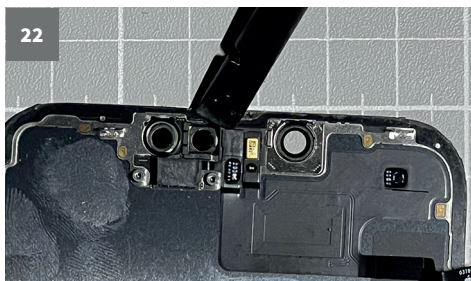


Removing the microphone



- Slide the spudger tip under the microphone cable close to the microphone.
- Loosen the adhesive with one movement around the microphone.

Lift off and remove the front sensor unit

- You will probably need some warmth again at this point. Don't worry - you're almost there.

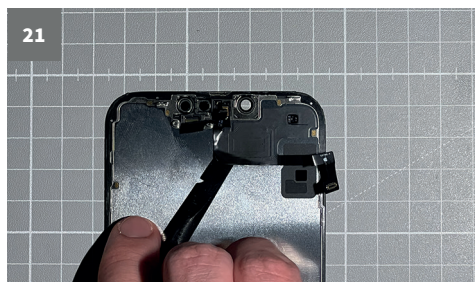

- Now slide the flat side of the spudger on the left under the front sensor unit.
- Carefully slide it to the right until the unit detaches from the display frame.



- Now you can remove the upper speaker and the front sensor unit with the tweezers.

- Make a good impression of the position for re-installation.
- You have now removed all the elements! Congratulations! The installation of your new Fixxoo display can now begin.

Reinstalling the Fixxoo display


- When reinstalling the Fixxoo display you'll simply repeat the steps in this instruction guide in reverse order.

Please pay attention to the following:

- **Fig. 21/22: First attach the sensors in their recesses and then press the front sensor unit firmly with your finger. If it no longer adheres properly, use some adhesive tape to help.**
- **Figure 19/20:** The module must be aligned so that the proximity sensor and flood illuminator are not obstructed by glue. This could impact their function.
- **Figure 13/14:** If you want to replace the display seals, do this before reattaching the front sensor plug.
- **Figure 10: This and other plugs are so-called pressure plugs. These must be carefully aligned during reassembly and pressed down on one side until it engages. Then repeat this on the other side. A pressure in the middle could bend the pins and damage the component or the plug.**
 ⚠ **Caution: Pressure in the centre could bend the pins and damage the component or the plug.**
- **Figure 8:** Turn the phone on and check its functioning. Check the following things:
 - » Screen
 - » Sound
 - » Touch sensitivity
 - » Proximity sensors
 Does everything work? Then you can close the case.
- **Figure 7:** Be careful to place the display in the correct position and position the clips at the upper edge correctly. First, carefully press the upper edge into place, then seat the remaining edges of the display. Be careful not to bend the clips.

EN Notes after installation of the display

After installing the display, this error message may appear when starting up:

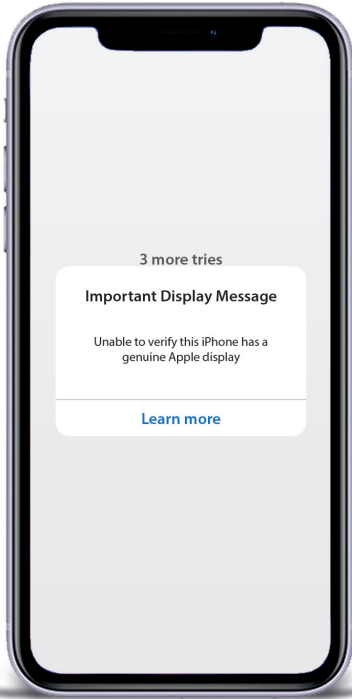

The reason is simple - from iPhone 11 onwards, the touch module is installed on the back of the display - and you have just replaced it. When booting up, the iOS operating system checks all components and notices that a new touch module is active.

You can ignore the error message (which you can also find in the settings). There is a DIY solution that involves soldering the old touch module to your new display - but this is only recommended for very advanced users.

⚠ This exchange is not recommended and is not supported by FIXXOO.

In everyday use, however, this error message, which only appears during startup, is not a problem.

Further information

With these repair instructions, you can reinstall a number of elements and sensors from your iPhone. These are:

- the transparent plastic holder of the front camera
- the sensor unit
- the earphone loudspeaker

These are not replaced with the FIXXOO Display Repair Set and it is particularly important to handle the sensors with care.

The sensor unit is connected to the logic board of your iPhone with a sensitive flex cable and is transferred to the new display during the repair. The Flood Illuminator (from Figure 18) is part of the Face ID technology.

⚠ If this is damaged, Face ID will no longer work and you will have to log in using other login functions (PIN).

Declaration of conformity

Stage10 GmbH hereby certifies that the electrically operated display screen conforms to guideline 2014/53/EU.

The complete text of the EU declaration of conformity is available at the following URL:

<https://support.fixxoo.de/hc/de/articles/14973641242770>



Disposal

Disposal of packaging:



Sort the packaging before disposal:

- » Cardboard and carton with paper
- » Plastic wrap with recycling collection

Disposing of a device:

(applicable in the European Union and other European countries with systems for separate collection of recyclables)



Used devices may not be placed in the household trash.

■ If your smartphone can no longer be used, each consumer is legally obligated to dispose of used devices separately from household trash, e.g. at a collection site in your community or municipality. This ensures that used devices are properly recycled, while avoiding negative environmental effects. For this reason, electronic devices are labeled with the symbol depicted here.

Manufacturer information and service

If you have questions about our display products, or if you experience any problems, first contact us by email at:

info@fixxoo.de

Fixxoo is a trademark of
Stage10 GmbH | Leipziger Platz 9 | 10117 Berlin

Troubleshooting

Does the display fail to turn on? Pixel errors? Is the iPhone beeping or vibrating? You can find the solution in our FAQ at:

support.fixxoo.de/hc/de

Fixxoo success guarantee:

Did it not work for you? No problem – Fixxoo will take care of the rest. The price of the repair kit will be credited to you. So you'll pay at most the regular price for a Fixxoo repair.

The only condition: The replacement part and your iPhone cannot have been damaged by your repair attempt – but if you're simply missing a screw, that's not so bad.

FIXXOO

Display Repair Set



Fixxoo Support:
support.fixxoo.de/hc/de

Fixxoo
Display Repair Set
for Apple iPhone 14
Art.-No. 16350



FIXXOO

Fixxoo is a trademark of
Stage10 GmbH
Leipziger Platz 9
10117 Berlin | Germany

iPhone is a trademark of Apple Inc.,
registered in the U.S. and other countries.

